

S1 Lite Push Trolley Instruction Manual

 


Locating your Serial Number

The serial number for the Motocaddy S1 Lite Push Cart is located on the underside of the trolley frame. This number is required when registering your warranty online and should be kept handy for future use.

The same number should also be on the box received with your trolley. Please ensure you keep hold of the packaging in case you need to return your trolley for any reason. A proof of purchase must also be kept in case your trolley requires servicing during its warranty period.

Please keep a record of your trolley serial number here for future reference



Attaching the Wheels

The S1 Lite Push Cart has no definitive left or right wheel. To attach the wheels:

- 1. Press the button on the underside of the rear bar (fig. 1) and insert the axle fully
- 2. Release the button and pull the wheel out slightly until it clicks

To remove the rear wheels, simply push/hold the button and pull the wheel outwards.



Adjusting the Front Wheel Alignment

In the unlikely event that your trolley is not tracking in a straight line, the alignment of the front wheel can be adjusted to rectify the fault. This problem can be caused by a number of factors including a slightly loose bag support or an unevenly packed golf bag. Should you wish to alter the alignment of the front wheel, please follow these simple steps:

- 1. Use a flat blade screwdriver to remove the plastic cap on the right hand side of the front wheel housing (fig. 1)
- 2. Insert an Allen key into the fitting underneath and turn anti-clockwise to loosen slightly (fig. 2)
- 3. There two small metal dials on either side of the housing that are used to realign the wheel (fig. 3 & 4)
- 4. If your trolley is veering to the right, turn the left dial clockwise and the right dial anti-clockwise
- 5. If your trolley is veering to the left, turn the right dial clockwise and the left dial anti-clockwise
- 6. Tighten the Allen key bolt and cover with the plastic cap. You may need to apply a small amount of glue to secure fully

This procedure can be carried out until the trolley is moving in a straight line (you may only need to adjust one dial at a time).









This Motocaddy trolley is fitted with the QUIKFOLD system, allowing you to fold and unfold your trolley quicker than ever before.

Unfolding your Trolley

- 1. Press and hold the upper QUIKFOLD release button (fig. 1)
- 2. Lift the handle and release the button (fig. 2)
- 3. Unfold the upper frame section fully (fig. 3)
- 4. Lift the main frame from the central hinge using the section marked 'Hold Here' until the QUIKFOLD system clicks in place. **Do not hold/touch the trolley anywhere else during this process** (fig. 4)
- 5. Unfold the upper bag support

NB : Do not lift from the handle (step 4 above) as this will complicate the folding process and may damage your trolley.











Fig 2

Folding your Trolley

- 1. Ensure that the upper bag support has been folded up to avoid damage to the frame whilst folding.
- 2. Press and hold the lower QUIKFOLD release button (fig. 1)
- 3. Lower the main frame completely, releasing the button at any point (fig. 2)
- 4. Once the frame is completely flat, fold the handle towards the front wheel until the QUIKFOLD system clicks in place (fig. 3)
- 5. You may need to gently push as indicated if you do not hear a click (fig. 4)

Fig 2

NB : To avoid injury, ensure the latch has clicked in place securely before carrying.









Using the Upper Bag Supports

The upper bag support straps are secured using the following steps:

- 1. Stretch the elasticated strap around the bag & loop the rounded bar underneath the hook (fig. 1)
- 2. Position the two placement straps centrally on your golf bag (fig. 2)

Using the Lower Bag Supports

This Motocaddy trolley is fitted with the EASILOCK[™] bag attachment system. If you are using an EASILOCK[™] compatible golf bag please follow these simple instructions:

- 1. Remove the two pre-fitted lower bag straps by depressing the rear button and sliding (fig. 3)
- 2. Match up the indicating line on the golf bag with the line on the lower bag support
- 3. Lower the bag until the pins lock in position. You should hear a small click

If you are using a non-EASILOCK[™] golf bag, please use the following instructions:

- 1. Stretch the lower bag strap around the bag base & loop the rounded bar underneath the hook
- 2. Position the two placement straps centrally on the base of your golf bag

Please ensure all straps are hooked securely before releasing. Failure to do so could result in injury.







Fig 2



Adjusting the Bag Supports

The bag support straps are manufactured from elasticated material to allow your golf bag to be held tightly in place.

The strap should be adjusted to be reasonably tight around the golf bag:

- 1. Unclip the elasticated straps from the housing by pulling outwards in the direction shown (fig. 1)
- 2. Move the bar as required to tighten or loosen the strap fitting. Pulling the bar downwards will tighten, pushing it upwards will loosen (fig. 2)
- 3. Ensure that the straps are clipped back into the housing before use (fig. 3)

Using the Parking Brake

The foot brake on the S1 Lite Push Cart is designed to be used as a parking brake (like a hand brake of a car or foot brake on a pram). When applying the brake, please ensure that the trolley has completely stopped moving.

WARNING: attempting to apply the brake whilst the trolley is still in motion may cause damage to the trolley and could invalidate the warranty.

Always ensure that the parking brake has been disengaged before attempting to set off again.











Motocaddy Ltd, Units 15 - 18 Stansted Distribution Centre, Start Hill, Great Hallingbury, Hertfordshire, CM22 7DG, United Kingdom

t: +44 (0)1279 712 370 e: info@motocaddy.com w: www.motocaddy.com



We are dedicated to protecting the environment and encourage the recycling of Motocaddy products through a free collection and disposal service. To find out more or to locate your nearest Motocaddy recycling point, please contact us through our website.

MC.17.16.003

EASILOCK[™] Patent (GB) - GB2519073