


2016 S-SERIES TROLLEY SEAT

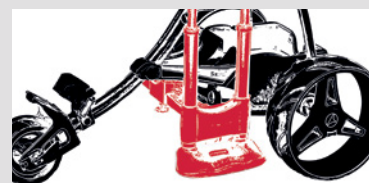


Tools Required
Phillips screwdriver
Allen key (supplied)



Attaching the mount to your trolley

- 1** From the folded position, turn the trolley upside down to expose the underside of the battery tray
- 2** Attach Section A to the underside of the trolley using the 4 screws provided (fig. 1)
- 3** Connect Section B to Section A using the three remaining screws (fig. 2)

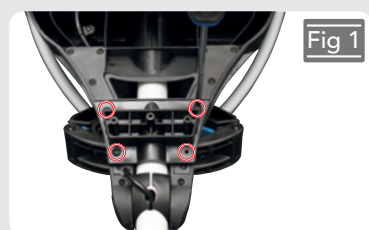

Assembling and Fitting the seat

- 4** The main section of the seat will arrive in two parts. Attach the padded seat top to the twin tubed section so that the seat overhang aligns with the feet (fig. 3)
- 5** Insert the nuts and bolts in position and secure using the Allen key provided (fig. 3 inset)
- 6** Insert the seat bar into the pre-fitted mount until there is the same amount of tube on both sides (fig. 4)
- 7** Secure and tighten underneath with the plastic bolt (fig. 4 inset)
- 8** Slot the legs of the seat onto the end of the seat bar (fig. 5)

